

The chipset compatibility

2260(All the manufacturers)

2262(All the manufacturers)

PT2264/2240/5326(All the manufacturers)

SC5262,HT600/HT6P20B/
HT6P20D/HT680/HT6207/
HT6010/HT6012/HT6014,
SMC918 Series,
527(All the manufacturers)

1527(All the manufacturers)
2240(All the manufacturers)


HCS101/200/201(Parts of code)
HCS300/301(Parts of code)

Parts of single chip.....

Duplicator Remote User Manual

Copy Way

- 1).Erase the code
(Clear the history code from duplicator)
A.Press button " A "and" B" at the same time until LED flash 3 times
B.Release button " B" and Keep pressing button " A" ,then press button "B" 3times LED flash fast
C.Release button " A" ,finish code clearance

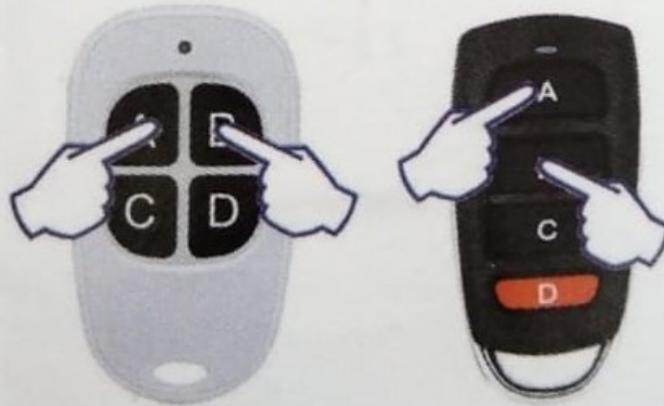

- 2).Duplicating
(Copy code from original transmitter)
A.Put duplicator aside of original transmitter,as close as possible.
B.Press and hold button " A" of original transmitter,then press and hold button "A" of duplicator until you see the duplicator' s LED flash and keep lighting
C.Release both buttons,finish code copy, copy other button in same way.



- 3).Resume
Press and hold button "C" and "D" for 3 seconds, the LED flash, all buttons return back to the latest copy codes.